



1/18

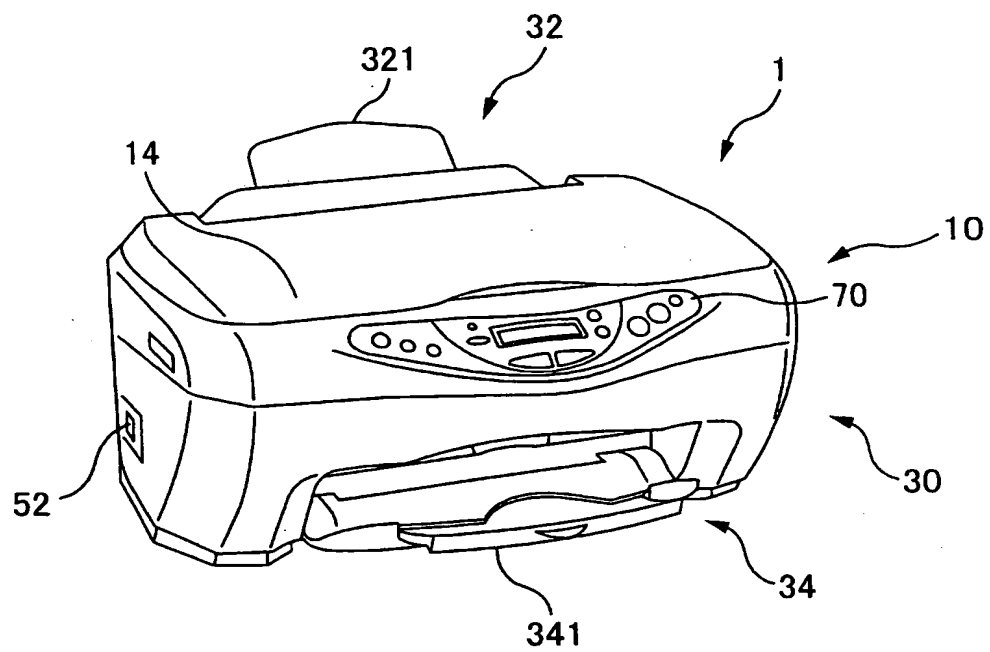 


Fig. 1

2/18

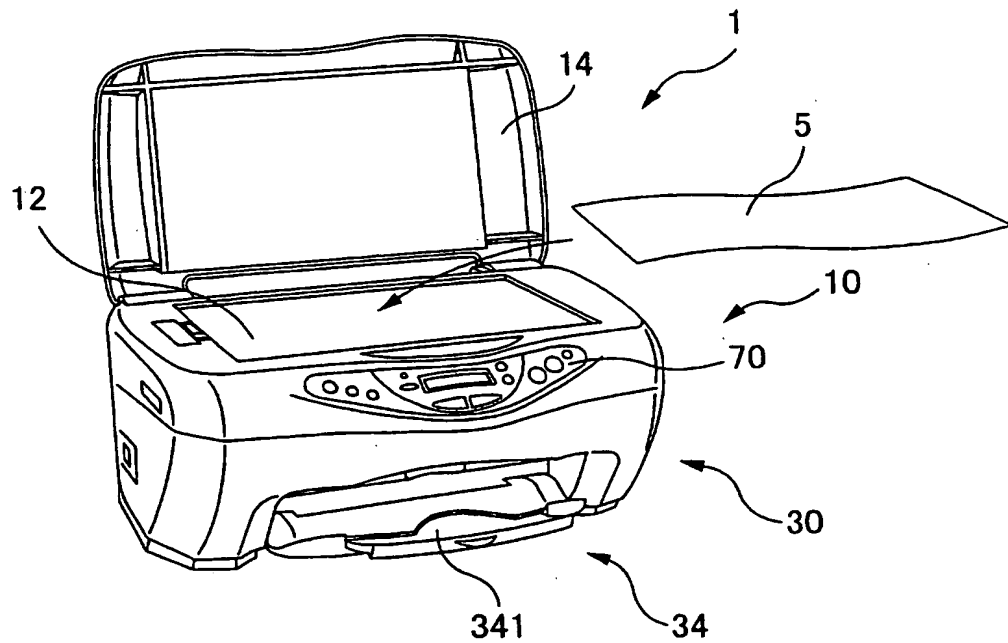 


Fig. 2



3  
5  
11

4/18

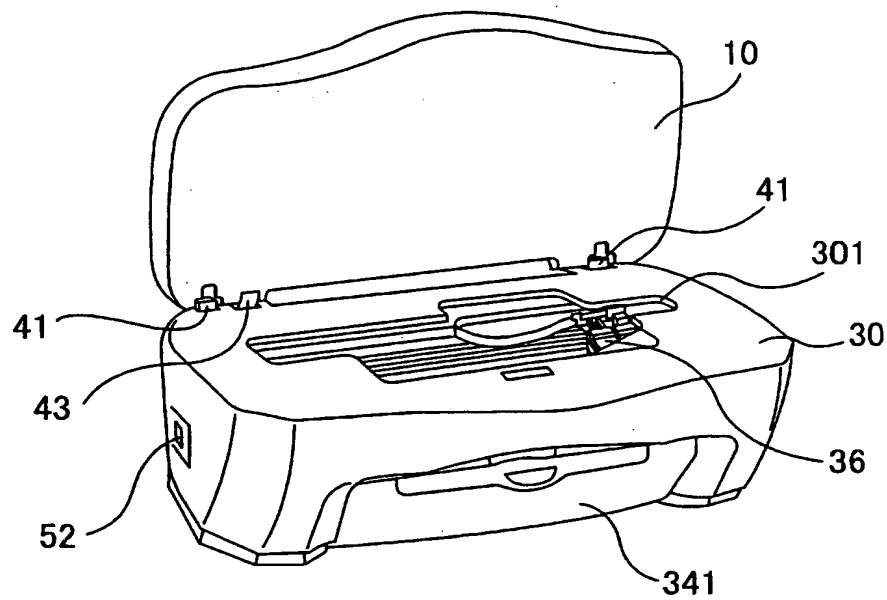 


Fig. 4

5/18

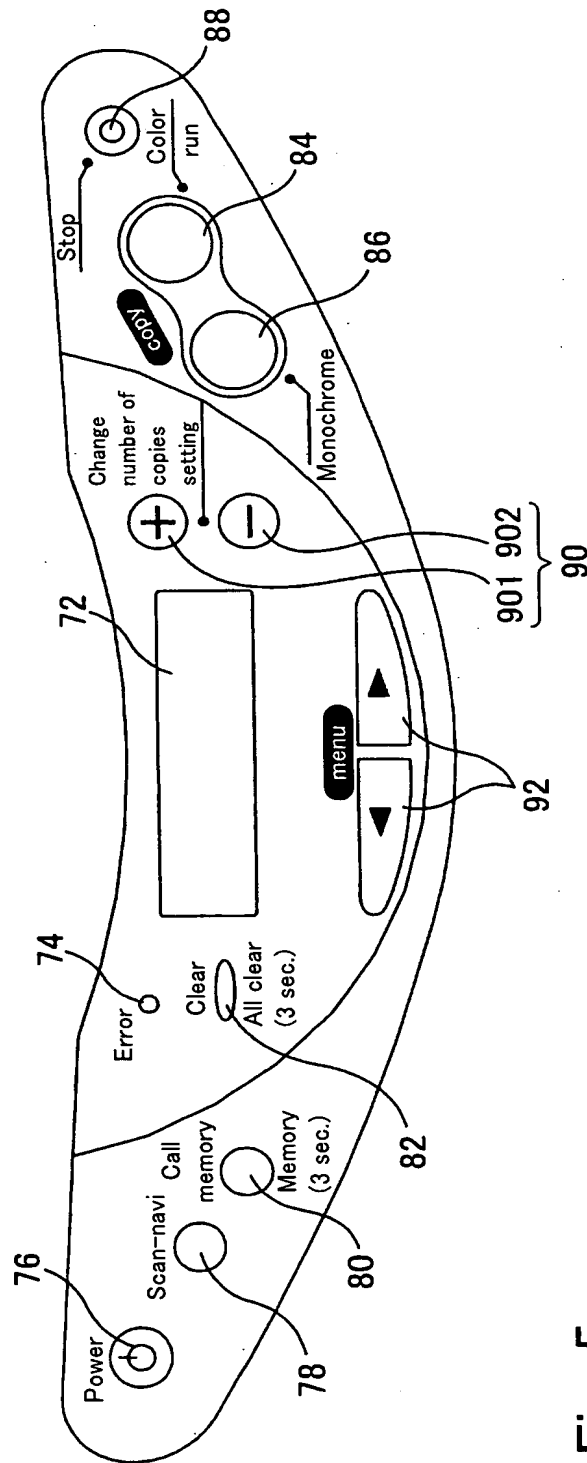 
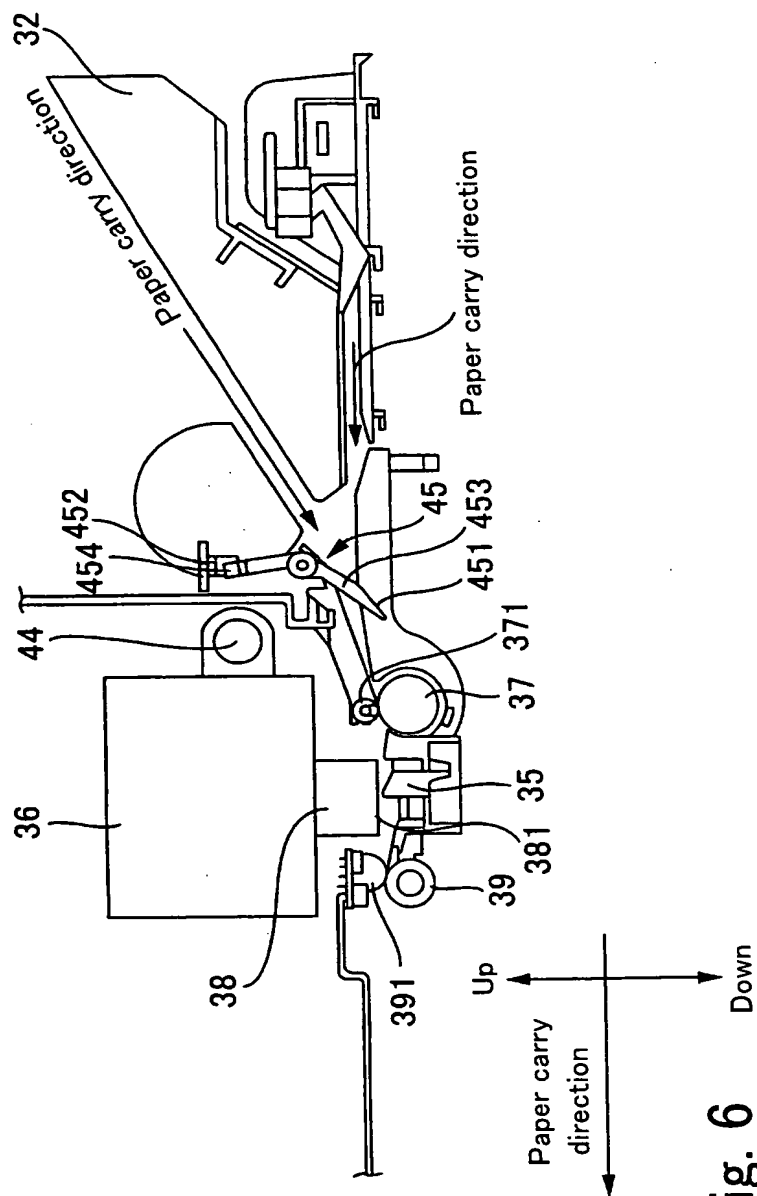 


Fig. 5

6/18



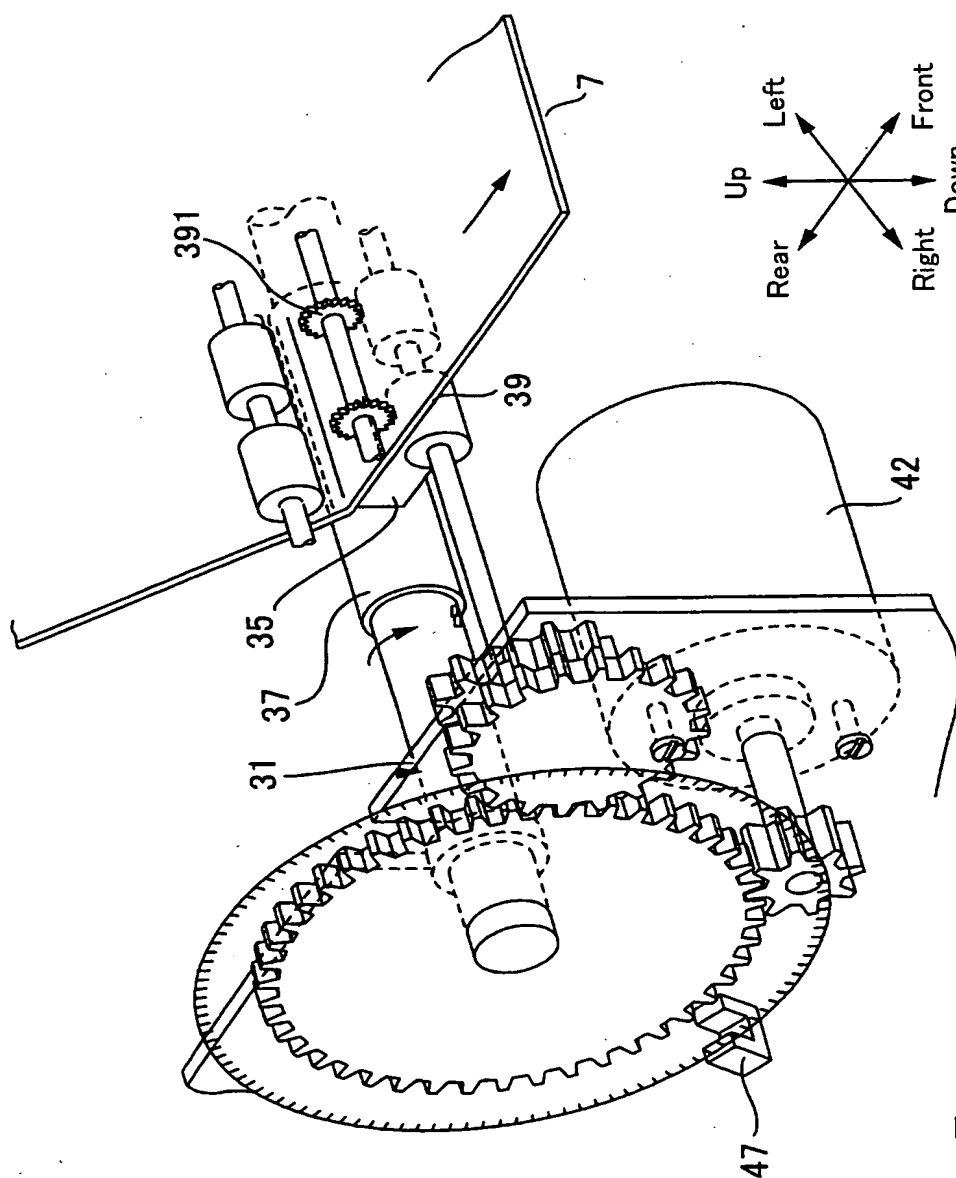 


Fig. 7

8/18

 
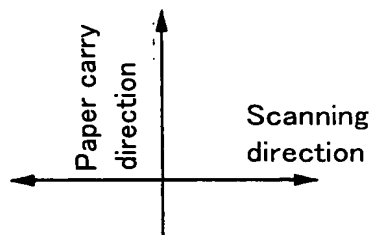 


Fig. 8

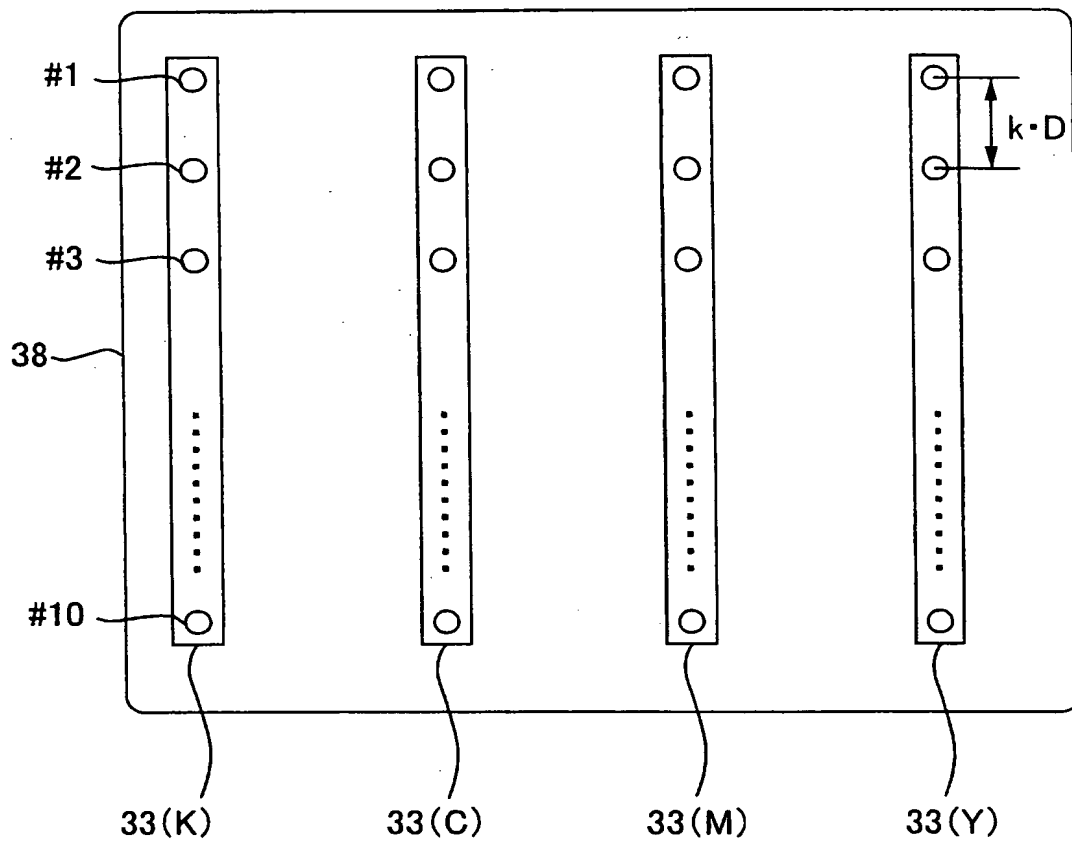

9/18

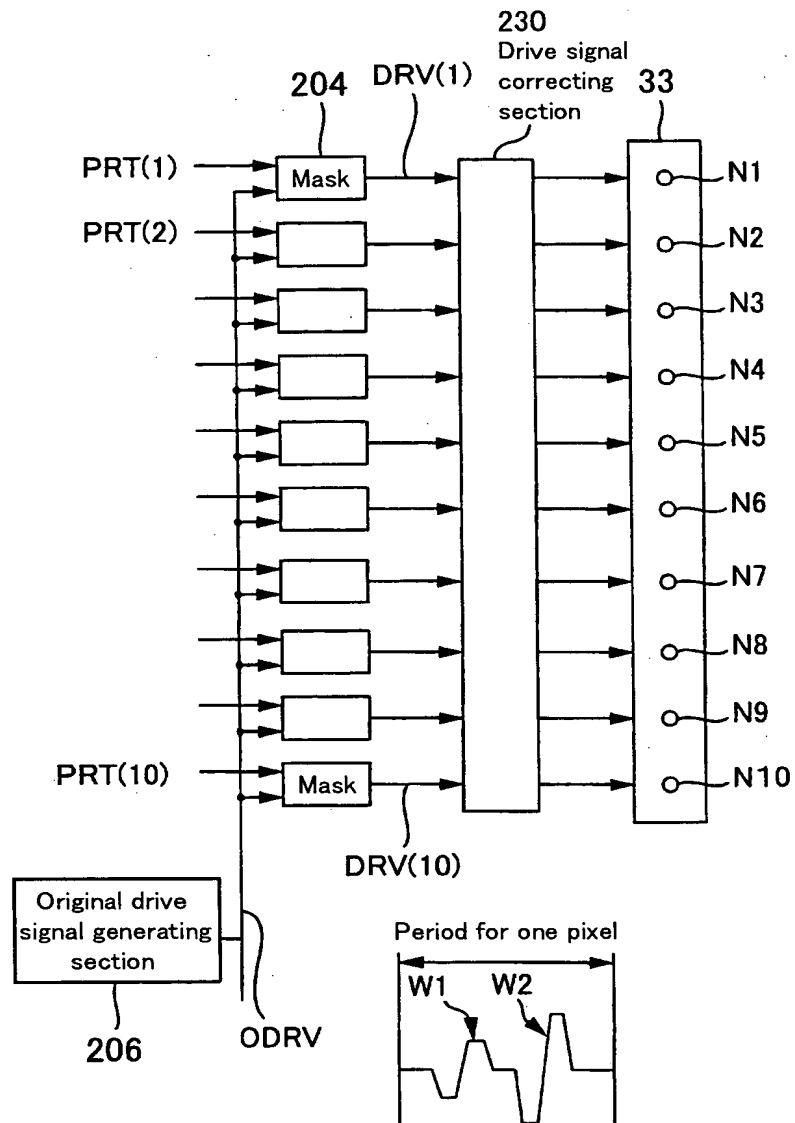 


Fig. 9



Fi 10

11/18

541a

Copy quality mode
Plain paper – economy
Plain paper – fast
Plain paper – fine
Super-fine paper – fast
Super-fine paper – fine
Glossy paper
PM photo paper
PM matte paper

Fig. 11

12/18

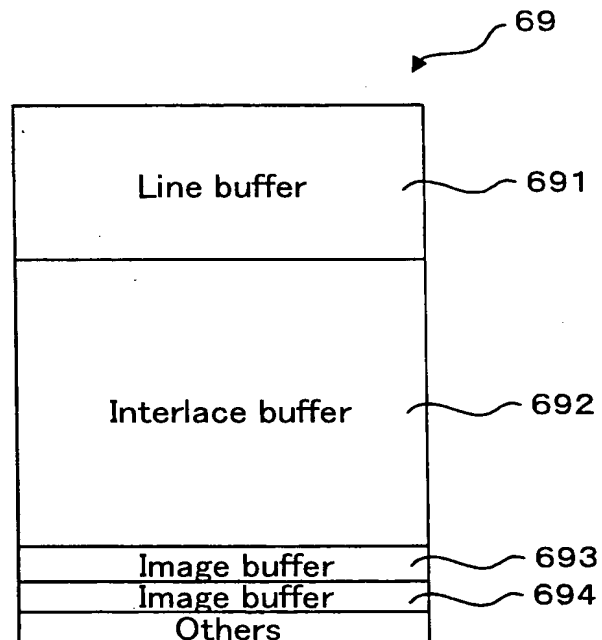 


Fig. 12

13/18

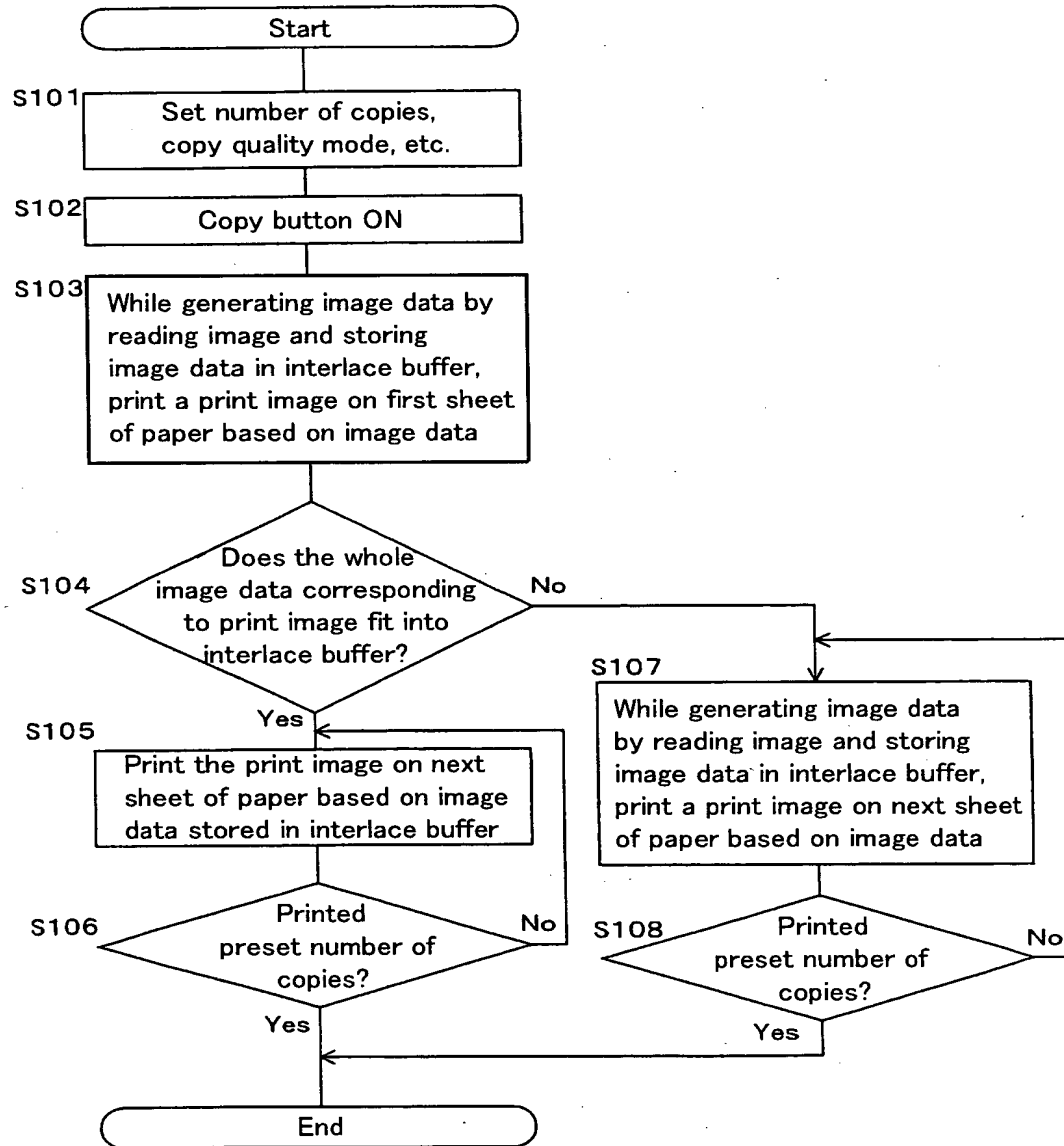 


Fig. 13

14/18

541

Copy quality mode	Color/Monochrome print mode	
	Color	Monochrome
Plain paper – economy	○	○
Plain paper – fast	×	○
Plain paper – fine	×	×
Super-fine paper – fast	×	×
Super-fine paper – fine	×	×
Glossy paper	×	×
PM photo paper	×	×
PM matte paper	×	×

○ : Fits in  
× : Does not fit in

Fig. 14

15/18

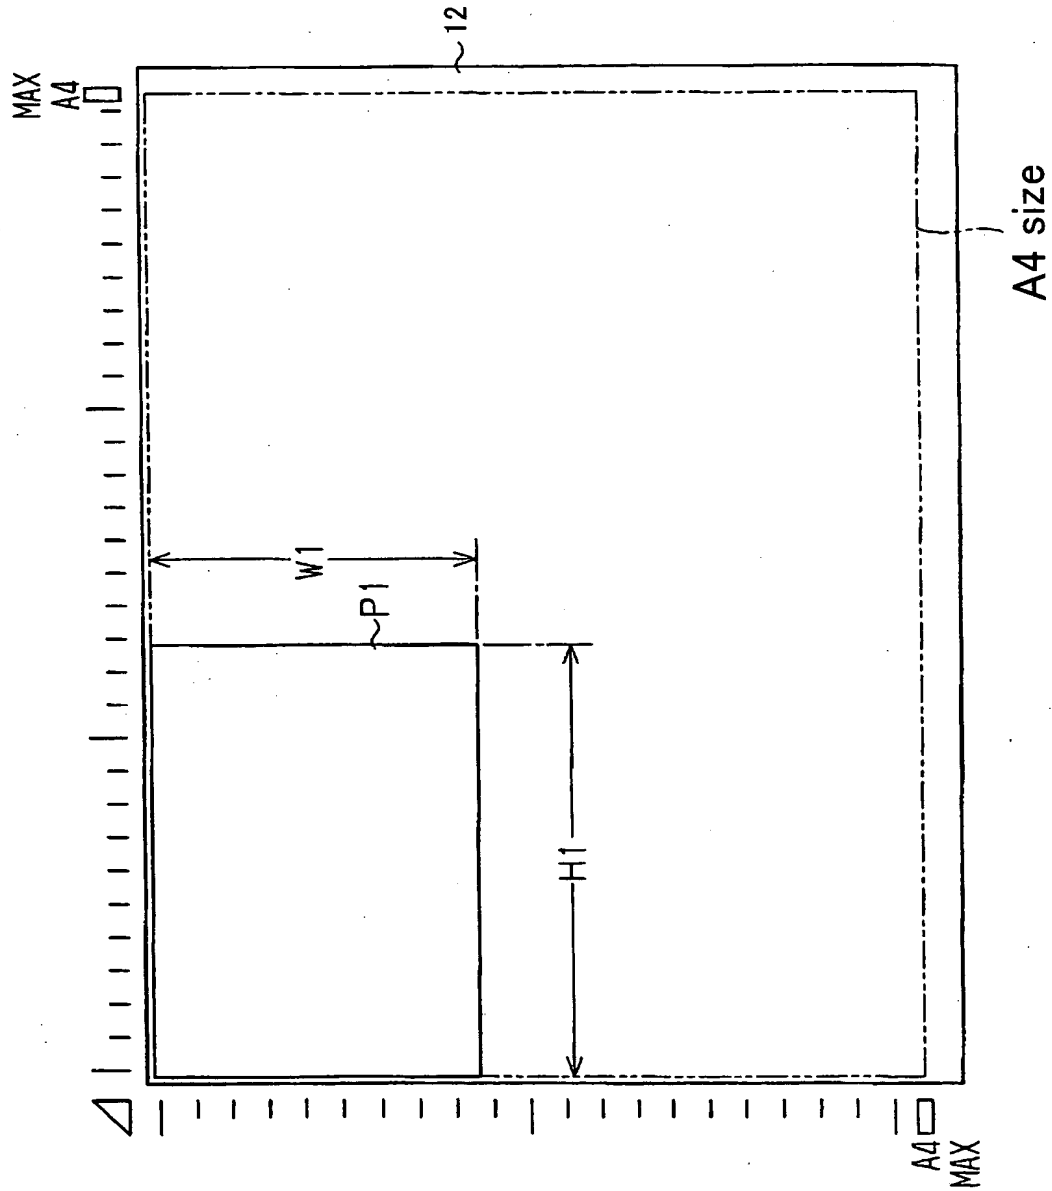 


Fig. 15

16/18

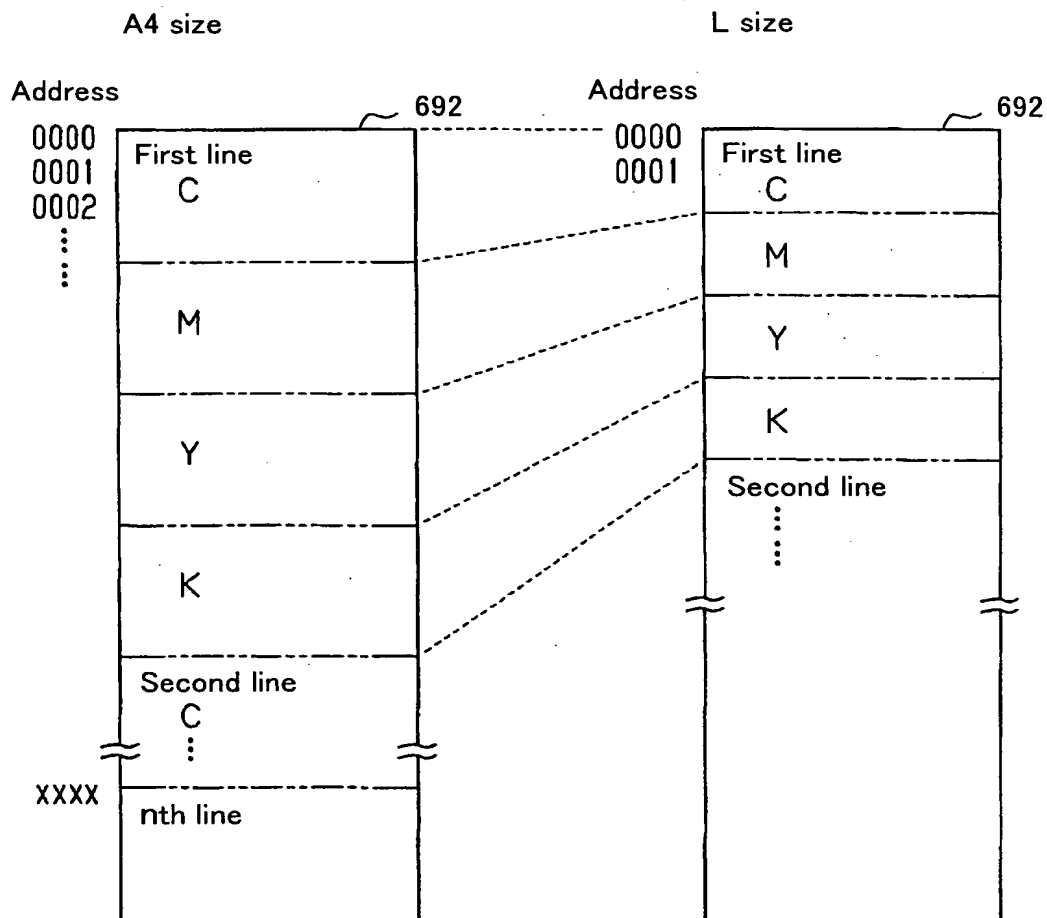 


Fig. 16



17/18

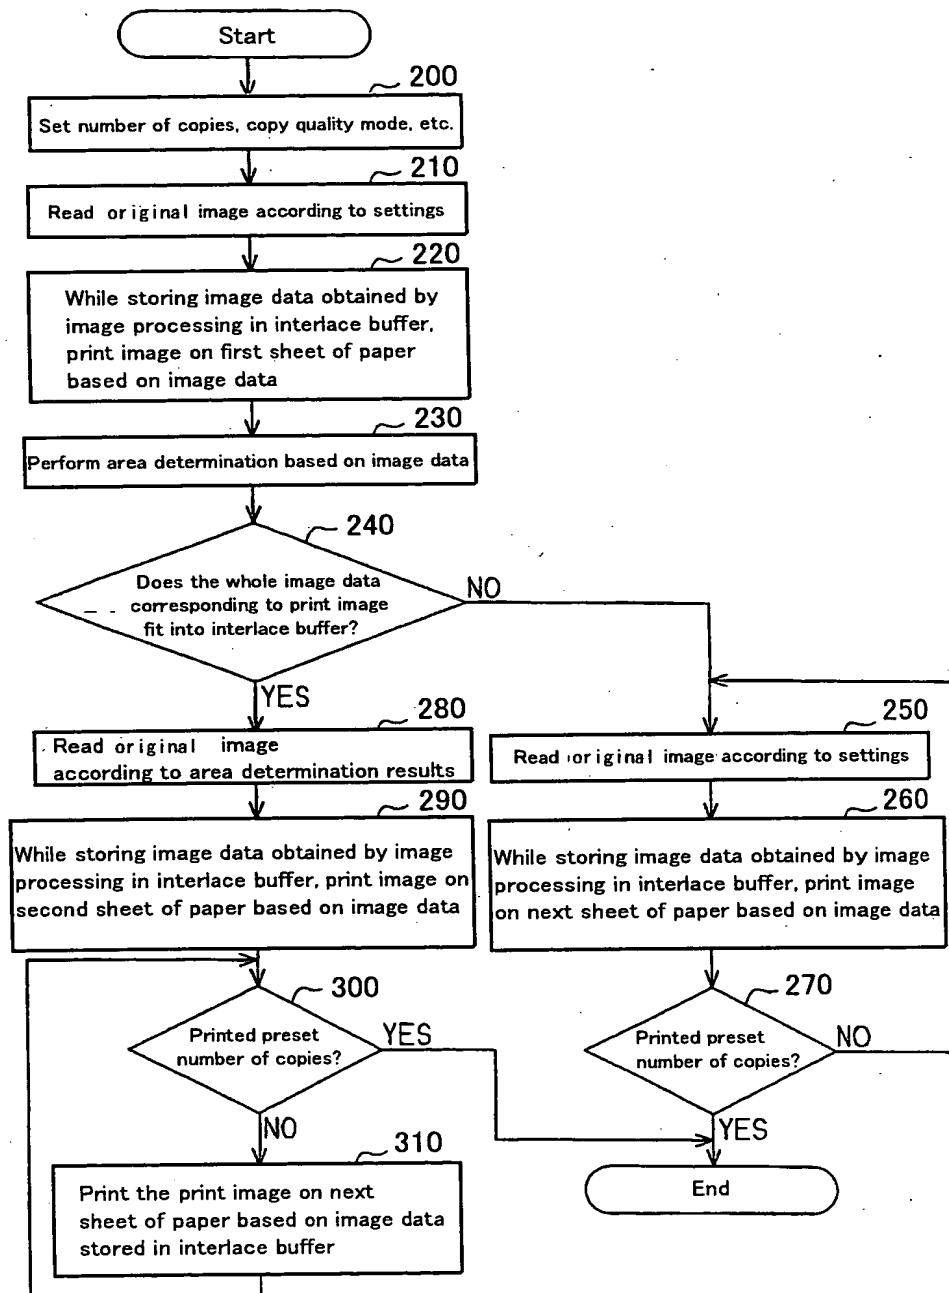 


Fig. 17

18/18

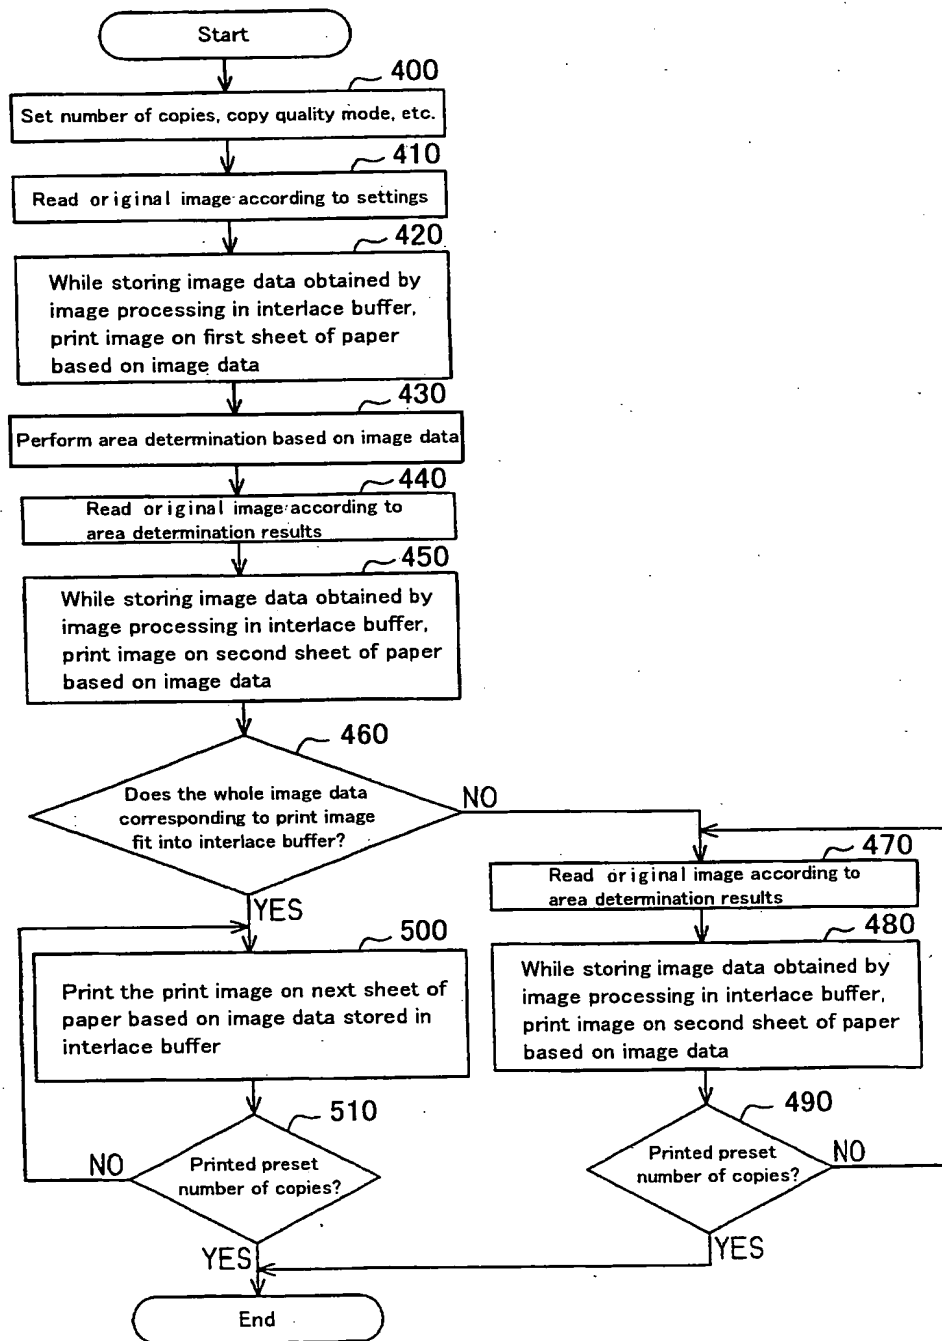 


Fig. 18